

Setting Time And Date

* 6 , then your (Master Code)

(1) Time and Date _ Enter 4 digits for 24hour System time (HH:MM), Enter 6 digits for the Month, Day and Year (MM - DD -YY) # to exit

Programming Master or User access code.

* 5, then your (Master Code) Enter the 2 - digit number to be Programmed (i.e 01 for user 1 new access code; enter 40 for the master code) # to exit

User Code 1-39

Master 40

To manual bypass a zone

* 1 Enter the 2 - digit number of the zone(s) you wish to bypass. To exit bypassing mode and return to the Ready State, Press #

Zone list

01.Garage Entry Door

02.Front Door

03.Den Motion

04.Master Bedroom Motion

05.Den Glass break Det

06.Garage Door

07.Back Window Left

08.Back Window Right

10.Den Sliding Glass Door

